



msi[™]

990FXA-GD80 series

MS-7640 (v2.x) Mainboard

G52-76401XB

Copyright Notice

The material in this document is the intellectual property of MICRO-STAR INTERNATIONAL. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

Trademarks

All trademarks are the properties of their respective owners.

- MSI® is registered trademark of Micro-Star Int'l Co.,Ltd.
- NVIDIA® is registered trademark of NVIDIA Corporation.
- ATI® is registered trademark of ATI Technologies, Inc.
- AMD® is registered trademarks of AMD Corporation.
- Intel® is registered trademarks of Intel Corporation.
- Windows® is registered trademarks of Microsoft Corporation.
- AMI® is registered trademark of American Megatrends Inc.
- Award® is a registered trademark of Phoenix Technologies Ltd.
- Sound Blaster® is registered trademark of Creative Technology Ltd.
- Realtek® is registered trademark of Realtek Semiconductor Corporation.
- JMicron® is registered trademark of JMicron Technology Corporation.
- Netware® is a registered trademark of Novell, Inc.

Revision History

Revision	Revision History	Date
V2.0	First release for PCB 2.X	2011/04

Technical Support

If a problem arises with your system and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please try the following help resources for further guidance.

- ☐ Visit the MSI website for FAQ, technical guide, BIOS updates, driver updates, and other information: <http://www.msi.com/service/download/>
- ☐ Contact our technical staff at: <http://support.msi.com/>

Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. **DO NOT COVER THE OPENINGS.**
- Make sure the voltage of the power source and adjust properly 110/220V before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always Unplug the Power Cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or you can not get it work according to User's Manual.
 - The equipment has dropped and damaged.
 - The equipment has obvious sign of breakage.

DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT UNCONDITIONED, STORAGE TEMPERATURE ABOVE 60°C (140°F), IT MAY DAMAGE THE EQUIPMENT.

CAUTION: Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

警告使用者:

這是甲類資訊產品，在居住的環境中使用時，可能會造成無線電干擾，在這種情況下，使用者會被要求採取某些適當的對策。



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling special disposal.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below.



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.


Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with the emission limits.

 VOIR LA NOTICE D'INSTALLATION AVANT DE RACCORDER AU RESEAU.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

WEEE (Waste Electrical and Electronic Equipment) Statement

ENGLISH

To protect the global environment and as an environmentalist, MSI must remind you that...



Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life. MSI will comply with the product take back requirements at the end of life of MSI-branded products that are sold into the EU. You can return these products to local collection points.

DEUTSCH

Hinweis von MSI zur Erhaltung und Schutz unserer Umwelt

Gemäß der Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte dürfen Elektro- und Elektronik-Altgeräte nicht mehr als kommunale Abfälle entsorgt werden. MSI hat europaweit verschiedene Sammel- und Recyclingunternehmen beauftragt, die in die Europäische Union in Verkehr gebrachten Produkte, am Ende seines Lebenszyklus zurückzunehmen. Bitte entsorgen Sie dieses Produkt zum gegebenen Zeitpunkt ausschliesslich an einer lokalen Altgerätesammelstelle in Ihrer Nähe.

FRANÇAIS

En tant qu'écologiste et afin de protéger l'environnement, MSI tient à rappeler ceci...

Au sujet de la directive européenne (EU) relative aux déchets des équipement électriques et électroniques, directive 2002/96/EC, prenant effet le 13 août 2005, que les produits électriques et électroniques ne peuvent être déposés dans les décharges ou tout simplement mis à la poubelle. Les fabricants de ces équipements seront obligés de récupérer certains produits en fin de vie. MSI prendra en compte cette exigence relative au retour des produits en fin de vie au sein de la communauté européenne. Par conséquent vous pouvez retourner localement ces matériels dans les points de collecte.

РУССКИЙ

Компания MSI предпринимает активные действия по защите окружающей среды, поэтому напоминаем вам, что....

В соответствии с директивой Европейского Союза (ЕС) по предотвращению загрязнения окружающей среды использованным электрическим и электронным оборудованием (директива WEEE 2002/96/EC), вступающей в силу 13 августа 2005 года, изделия, относящиеся к электрическому и электронному оборудованию, не могут рассматриваться как бытовой мусор, поэтому производители вышеперечисленного электронного оборудования обязаны принимать его для переработки по окончании срока службы. MSI обязуется соблюдать требования по приему продукции, проданной под маркой MSI на территории ЕС, в переработку по окончании срока службы. Вы можете вернуть эти изделия в специализированные пункты приема.

ESPAÑOL

MSI como empresa comprometida con la protección del medio ambiente, recomienda: Bajo la directiva 2002/96/EC de la Unión Europea en materia de desechos y/o equipos electrónicos, con fecha de rigor desde el 13 de agosto de 2005, los productos clasificados como "eléctricos y equipos electrónicos" no pueden ser depositados en los contenedores habituales de su municipio, los fabricantes de equipos electrónicos, están obligados a hacerse cargo de dichos productos al término de su período de vida. MSI estará comprometido con los términos de recogida de sus productos vendidos en la Unión Europea al final de su período de vida. Usted debe depositar estos productos en el punto limpio establecido por el ayuntamiento de su localidad o entregar a una empresa autorizada para la recogida de estos residuos.

NEDERLANDS

Om het milieu te beschermen, wil MSI u eraan herinneren dat...

De richtlijn van de Europese Unie (EU) met betrekking tot Vervuiling van Electricische en Electronische producten (2002/96/EC), die op 13 Augustus 2005 in zal gaan kunnen niet meer beschouwd worden als vervuiling. Fabrikanten van dit soort producten worden verplicht om producten retour te nemen aan het eind van hun levenscyclus. MSI zal overeenkomstig de richtlijn handelen voor de producten die de merknaam MSI dragen en verkocht zijn in de EU. Deze goederen kunnen geretourneerd worden op lokale inzamelingspunten.

SRPSKI

Da bi zaštitili prirodnu sredinu, i kao preduzeće koje vodi računa o okolini i prirodnoj sredini, MSI mora da vas podesti da...

Po Direktivi Evropske unije ("EU") o odbačenju elektonskoj i električnoj opremi, Direktiva 2002/96/EC, koja stupa na snagu od 13. Avgusta 2005, proizvodi koji spadaju pod "elektronsku i električnu opremu" ne mogu više biti odbačeni kao običan otpad i proizvođači ove opreme biće prinuđeni da uzmu natrag ove proizvode na kraju njihovog uobičajenog veka trajanja. MSI će poštovati zahtev o preuzimanju ovakvih proizvoda kojima je istekao vek trajanja, koji imaju MSI oznaku i koji su prodati u EU. Ove proizvode možete vratiti na lokalnim mestima za prikupljanje.

POLSKI

Aby chronić nasze środowisko naturalne oraz jako firma dbająca o ekologię, MSI przypomina, że...

Zgodnie z Dyrektywą Unii Europejskiej ("UE") dotyczącą odpadów produktów elektrycznych i elektronicznych (Dyrektywa 2002/96/EC), która wchodzi w życie 13 sierpnia 2005, tzw. "produkty oraz wyposażenie elektryczne i elektroniczne" nie mogą być traktowane jako śmieci komunalne, tak więc producenci tych produktów będą zobowiązani do odbierania ich w momencie gdy produkt jest wycofywany z użycia. MSI wypełni wymagania UE, przyjmując produkty (sprzedawane na terenie Unii Europejskiej) wycofywane z użycia. Produkty MSI będzie można zwracać w wyznaczonych punktach zbiorczych.

TÜRKÇE

Çevreci özelliğiyle bilinen MSI dünyada çevreyi korumak için hatırlatır:

Avrupa Birliği (AB) Kararnamesi Elektrik ve Elektronik Malzeme Atığı, 2002/96/EC Kararnamesi altında 13 Ağustos 2005 tarihinden itibaren geçerli olmak üzere, elektrikli ve elektronik malzemeler diğer atıklar gibi çöpe atılmayacak ve bu elektronik cihazların üreticileri, cihazların kullanım süreleri bittikten sonra ürünleri geri toplamakla yükümlü olacaktır. Avrupa Birliği'ne satılan MSI markalı ürünlerin kullanım süreleri bittiğinde MSI ürünlerin geri alınması isteği ile işbirliği içerisinde olacaktır. Ürünlerinizi yerel toplama noktalarına bırakabilirsiniz.

ČESKY

Záleží nám na ochraně životního prostředí - společnost MSI upozorňuje...

Podle směrnice Evropské unie ("EU") o likvidaci elektrických a elektronických výrobků 2002/96/EC platné od 13. srpna 2005 je zakázáno likvidovat "elektrické a elektronické výrobky" v běžném komunálním odpadu a výrobci elektrických výrobků, na které se tato směrnice vztahuje, budou povinni odebírat takové výrobky zpět po skončení jejich životnosti. Společnost MSI splní požadavky na odebírání výrobků značky MSI, prodávaných v zemích EU, po skončení jejich životnosti. Tyto výrobky můžete odevzdat v místních sběrnách.

MAGYAR

Annak érdekében, hogy környezetünket megvédjük, illetve környezetvédőként fellépve az MSI emlékezteti Önt, hogy ...

Az Európai Unió („EU”) 2005. augusztus 13-án hatályba lépő, az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK irányelve szerint az elektromos és elektronikus berendezések többé nem kezelhetőek lakossági hulladékként, és az ilyen elektronikus berendezések gyártói köteleessé válnak az ilyen termékek visszavételére azok hasznos élettartama végén. Az MSI betartja a termékvisszavétellel kapcsolatos követelményeket az MSI márkanev alatt az EU-n belül értékesített termékek esetében, azok élettartamának végén. Az ilyen termékeket a legközelebbi gyűjtőhelyre viheti.

ITALIANO


Per proteggere l'ambiente, MSI, da sempre amica della natura, ti ricorda che....

In base alla Direttiva dell'Unione Europea (EU) sullo Smaltimento dei Materiali Elettrici ed Elettronici, Direttiva 2002/96/EC in vigore dal 13 Agosto 2005, prodotti appartenenti alla categoria dei Materiali Elettrici ed Elettronici non possono più essere eliminati come rifiuti municipali: i produttori di detti materiali saranno obbligati a ritirare ogni prodotto alla fine del suo ciclo di vita. MSI si adegnerà a tale Direttiva ritirando tutti i prodotti marchiati MSI che sono stati venduti all'interno dell'Unione Europea alla fine del loro ciclo di vita. È possibile portare i prodotti nel più vicino punto di raccolta

CONTENTS

Copyright Notice	ii
Trademarks	ii
Revision History.....	ii
Technical Support.....	ii
Safety Instructions.....	iii
FCC-B Radio Frequency Interference Statement.....	iv
WEEE (Waste Electrical and Electronic Equipment) Statement	v
Chapter 1 Getting Started.....	1-1
Mainboard Specifications	1-2
Mainboard Layout	1-4
Packing Contents.....	1-5
Optional Accessories	1-5
Chapter 2 Hardware Setup.....	2-1
Quick Components Guide	2-2
Screw Holes	2-3
CPU (Central Processing Unit)	2-4
Memory	2-7
Power Supply	2-9
Back Panel.....	2-10
Connectors.....	2-12
Jumpers	2-18
Buttons	2-19
Slots	2-20
LED Status Indicators	2-21
Chapter 3 BIOS Setup.....	3-1
Entering Setup	3-2
The Menu Bar	3-4
Main Menu	3-5
Advanced	3-6
Overclocking	3-11
M-Flash	3-15
Security	3-16
Green Power	3-18
Boot.....	3-19
Save & Exit.....	3-20

Appendix A Realtek Audio	A-1
Installing the Realtek HD Audio Driver.....	A-2
Software Configuration.....	A-3
Hardware Default Setting.....	A-5
Appendix B AMD RAID	B-1
RAID Configuration	B-2

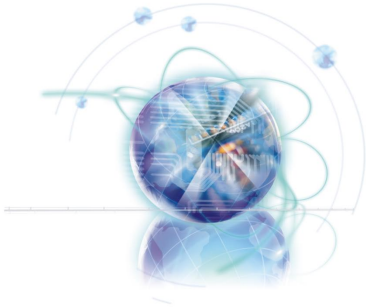

Chapter 1

Getting Started

Thank you for choosing the 990FXA-GD80 Series (MS-7640 v2.X) ATX mainboard. The 990FXA-GD80 Series mainboards are based on AMD® 990FX & SB950 chipsets for optimal system efficiency. Designed to fit the advanced AMD® 64 bits Phenom™ II X6/ X4/ X3/ X2, Athlon™ II X4/ X3/ X2 and Sempron™ processor, the 990FXA-GD80 Series deliver a high performance and professional desktop platform solution.

Mainboard Specifications

Processor Support

- AMD® Phenom™ II X6/ X4/ X3/ X2, Athlon™ II X4/ X3/ X2 and Sempron™ processor in the AM3+ package.
(For the latest information about CPU, please visit <http://www.msi.com/service/cpu-support/>)

HyperTransport

- HyperTransport™ 3.0, supports up to 5.2 GT/s

Chipset

- North Bridge: AMD® 990FX chipset
- South Bridge: AMD® SB950 chipset

Memory Support

- DDR3 2133 *(OC)/ 1800 *(OC)/ 1600 *(OC)/ 1333/ 1066 SDRAM (total 32 GB Max)
- 4 DDR3 DIMMs, supports Dual-Channel mode
*(OC means OverClocking, for more information on compatible components, please visit <http://www.msi.com/index.php?func=testreport>)

LAN

- Supports PCIE Gb LAN (10/100/1000) by Realtek® RTL8111E

IEEE 1394

- Chip integrated by VIA® VT6315N
- 2 IEEE 1394 ports

Audio

- HD audio codec integrated by Realtek® ALC892
- Flexible 8-channel audio with jack sensing

SATA

- 6 SATA 6Gb/s ports (SATA1~6) by AMD® SB950
- 2 eSATA/ USB Combo ports by JMicron® JMB362
- Supports hot plug & asynchronous notification

USB 3.0

- 2 USB 3.0 ports (back panel) and 1 USB 3.0 connector by NEC D720200

RAID

- SATA1~6 support RAID 0/ 1/ 5/ 10 mode by AMD® SB950

Connectors

- Back panel
 - 1 PS/2 keyboard port
 - 1 PS/2 mouse port
 - 1 Clear CMOS button
 - 1 Coaxial S/PDIF-Out port
 - 1 Optical S/PDIF-Out port
 - 4 USB 2.0 ports
 - 2 USB 3.0 ports
 - 2 eSATA/ USB 2.0 Combo ports
 - 1 LAN port
 - 1 IEEE 1394 port
 - 6 flexible audio ports
- On-Board
 - 2 USB 2.0 connectors
 - 1 IEEE 1394 connector
 - 1 Serial port connector
 - 1 Chassis Intrusion connector
 - 1 S/PDIF-Out connector
 - 1 Front Panel Audio connector
 - 1 TPM Module connector
 - 1 Power button
 - 1 Reset button
 - 1 OC Genie button
 - 1 Debug LED panel

Slots

- 4 PCIE x16 slots
 - PCI_E2 supports up to PCIE x16 speed
 - PCI_E4 supports up to PCIE x8 speed
 - PCI_E5 supports up to PCIE x16 speed (when PCI_E4 is empty)
 - PCI_E6 supports up to PCIE x4 speed
 - Supports ATI® CrossFireX™ technology
 - If you intend to install two expansion cards, please install them into PCI_E2 & PCI_E5 slots
 - If you intend to install three expansion cards into PCI_E2, PCI_E4 & PCI_E5 slots, these three PCIE x16 lanes will auto arrange from x16/ x0/ x16 to x16/ x8/ x8
- 2 PCIE x1 slots
- 1 PCI slot, supports 3.3V/ 5V PCI bus Interface


Form Factor

- ATX (24.4cm X 30.5 cm)

Mounting

- 9 mounting holes

Mainboard Layout

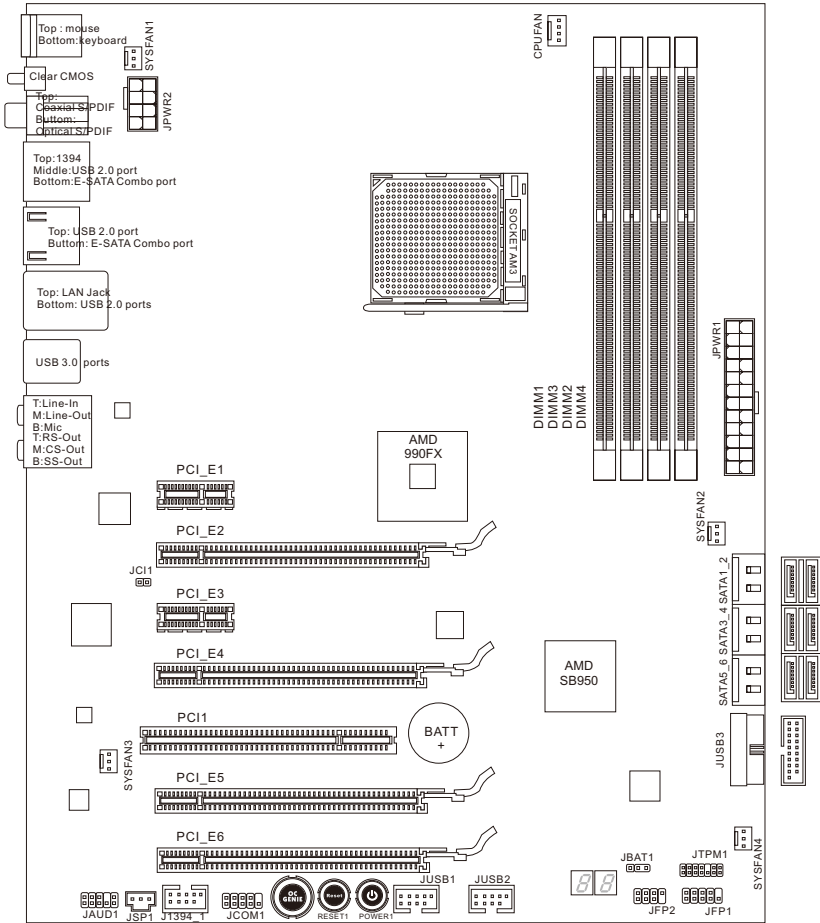

990FXA-GD80 Series (MS-7640 v2.X) ATX Mainboard

Packing Contents



Mainboard

Driver / Utility
DVD

User Guide



Back IO Shield



SATA Cable

Optional Accessories

USB 3.0
Bracket

M-Connector




SLI Cable

SATA Power
Cable

* These pictures are for reference only and may vary without notice.

* The packing contents may vary according to the model you purchased.

* If you need to purchase the optional accessories, please visit <http://www.msi.com/index.php> to inquire the part numbers or consult the dealer.

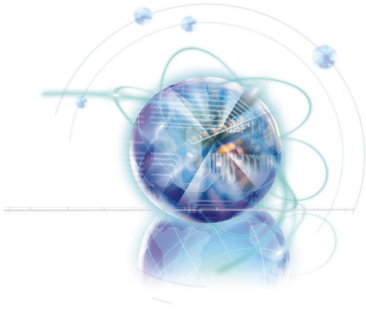


Chapter 2

Hardware Setup

This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.


Use a grounded wrist strap before handling computer components. Static electricity may damage the components.

Quick Components Guide

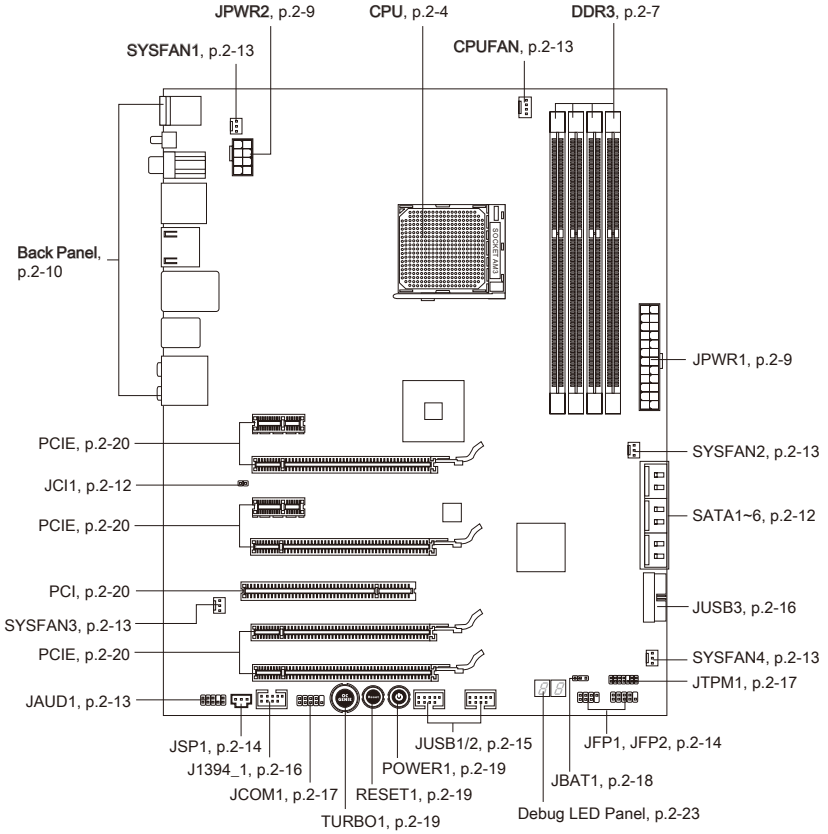

Screw Holes

When you install the mainboard, you have to place the mainboard into the chassis in the correct direction. The locations of screws holes on the mainboard are shown as below.

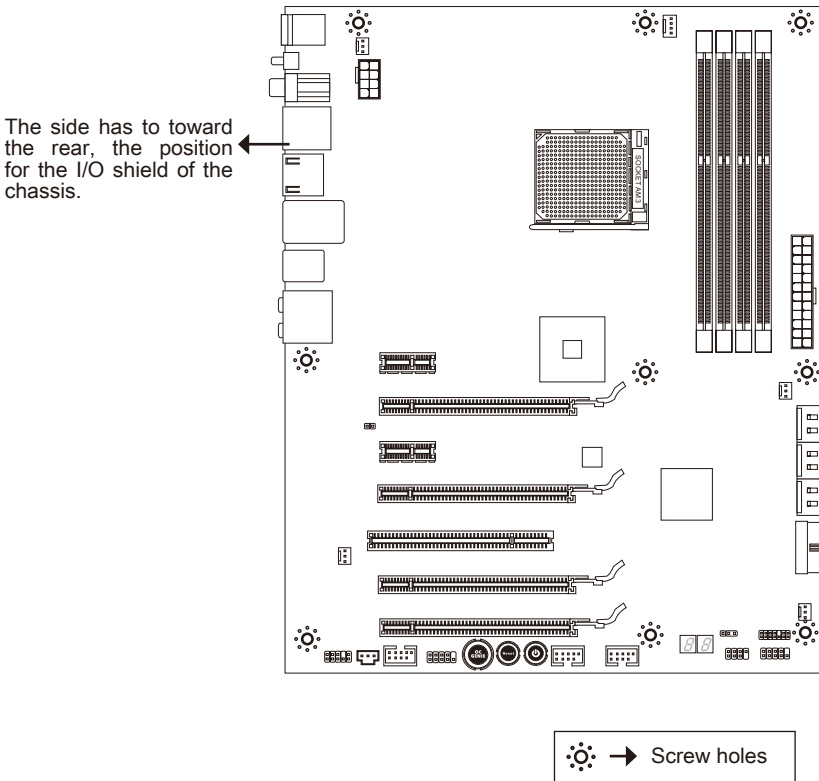

Refer above picture to install standoffs in the appropriate locations on chassis and then screw through the mainboard screw holes into the standoffs.

Important

- To prevent damage to the mainboard, any contact between the mainboard circuit and chassis or unnecessary standoffs mounted on the chassis is prohibited.
- Please make sure there is no metal components placed on the mainboard or within the chassis that may cause short circuit of the mainboard.

CPU (Central Processing Unit)

When you are installing the CPU, make sure to install the cooler to prevent overheating. If you do not have the CPU cooler, consult your dealer before turning on the computer. For the latest information about CPU, please visit <http://www.msi.com/service/cpu-support/>

Important

Overheating

Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.

Replacing the CPU

While replacing the CPU, always turn off the ATX power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.

Overclocking

This mainboard is designed to support overclocking. However, please make sure your components are able to tolerate such abnormal setting, while doing overclocking. Any attempt to operate beyond product specifications is not recommended. We do not guarantee the damages or risks caused by inadequate operation or beyond product specifications.

Introduction to AM3+ CPU

The surface of CPU. Remember to apply some thermal paste on it for better heat dispersion.





Gold arrow

CPU & Cooler Installation



When you are installing the CPU, make sure the CPU has a cooler attached on the top to prevent overheating. Meanwhile, do not forget to apply some thermal paste on CPU before installing the heat sink/cooler fan for better heat dispersion.

Follow the steps below to install the CPU & cooler correctly. Wrong installation will cause the damage of your CPU & mainboard


1. Pull the lever sideways away from the socket. Make sure to raise the lever up to a 90-degree angle.
2. Look for the gold arrow of the CPU. The gold arrow should point as shown in the picture. The CPU can only fit in the correct orientation.

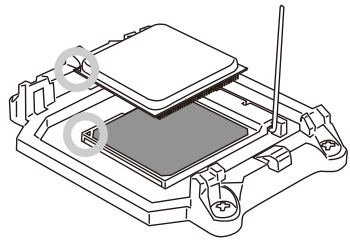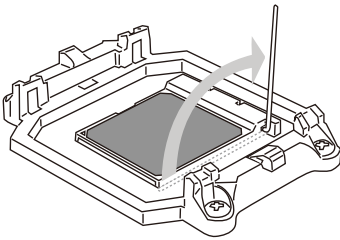


3. If the CPU is correctly installed, the pins should be completely embedded into the socket and can not be seen. Please note that any violation of the correct installation procedures may cause permanent damages to your mainboard.
4. Press the CPU down firmly into the socket and close the lever. As the CPU is likely to move while the lever is being closed, always close the lever with your fingers pressing tightly on top of the CPU to make sure the CPU is properly and completely embedded into the socket.

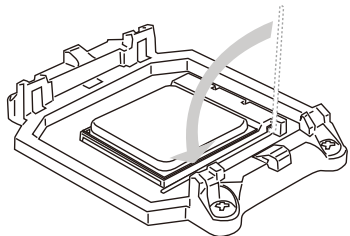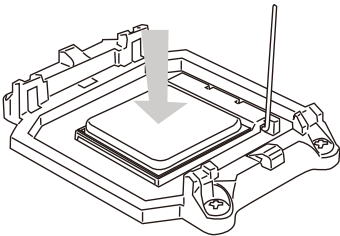


5. Position the cooling set onto the retention mechanism.
Hook one end of the clip to hook first.

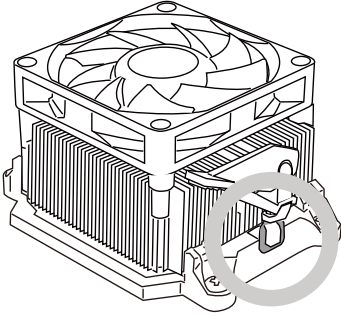


6. Then press down the other end of the clip to fasten the cooling set on the top of the retention mechanism.
Locate the Fix Lever and lift up it.

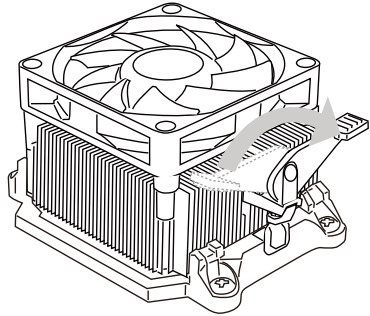

7. Fasten down the lever.

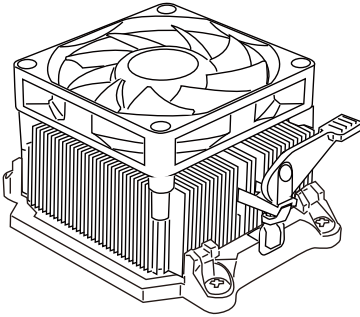

8. Attach the CPU Fan cable to the CPU fan connector on the mainboard.

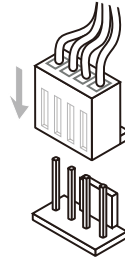


Important

While disconnecting the Safety Hook from the fixed bolt, it is necessary to keep an eye on your fingers, because once the Safety Hook is disconnected from the fixed bolt, the fixed lever will spring back instantly.



Memory

 These DIMM slots are used for installing memory modules. For more information on compatible components, please visit <http://www.msi.com/service/test-report/>



Dual-Channel mode Population Rule

In Dual-Channel mode, the memory modules can transmit and receive data with two data bus lines simultaneously. Enabling Dual-Channel mode can enhance the system performance. The following illustrations explain the population rules for Dual-Channel mode.

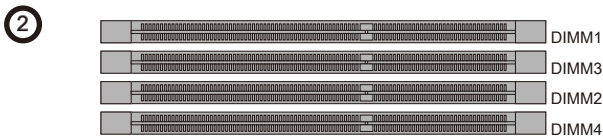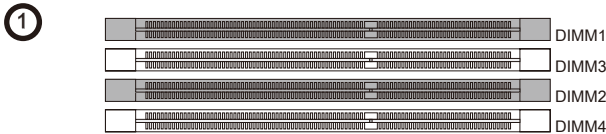


Important

- *DDR3 memory modules are not interchangeable with DDR2 and the DDR3 standard is not backwards compatible. You should always install DDR3 memory modules in the DDR3 DIMM slots.*
- *In Dual-Channel mode, make sure that you install memory modules of the **same type and density** in different channel DIMM slots.*
- *To enable successful system boot-up, always insert the memory modules into the **DIMM1 first**.*
- *Due to the chipset resource deployment, the system density will only be detected up to 31+GB (not full 32GB) when each DIMM is installed with a 8GB memory module.*

Installing Memory Modules

1. The memory module has only one notch on the center and will only fit in the right orientation.
2. Insert the memory module vertically into the DIMM slot. Then push it in until the golden finger on the memory module is deeply inserted in the DIMM slot. The plastic clip at each side of the DIMM slot will automatically close when the memory module is properly seated.
3. Manually check if the memory module has been locked in place by the DIMM slot clips at the sides.

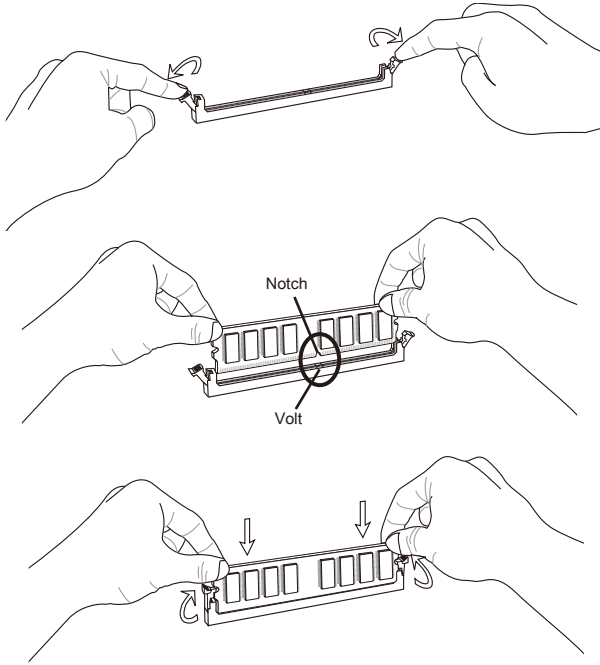

Important


You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.

Power Supply

ATX 24-pin Power Connector: JPWR1


This connector allows you to connect an ATX 24-pin power supply. To connect the ATX 24-pin power supply, make sure the plug of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector.

You may use the 20-pin ATX power supply as you like. If you'd like to use the 20-pin ATX power supply, please plug your power supply along with pin 1 & pin 13.

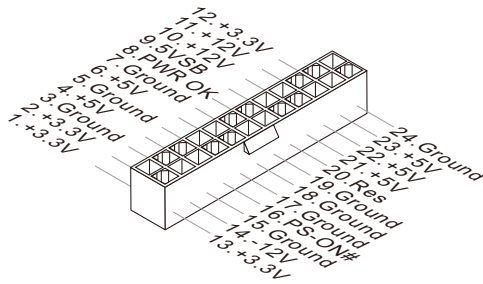

ATX 8-pin Power Connector: JPWR2


This connector is used to provide +12V power.

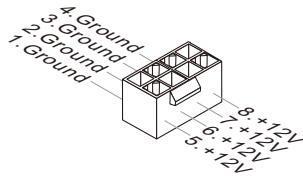

Important

Make sure that all the connectors are connected to proper ATX power supplies to ensure stable operation of the mainboard.

Back Panel

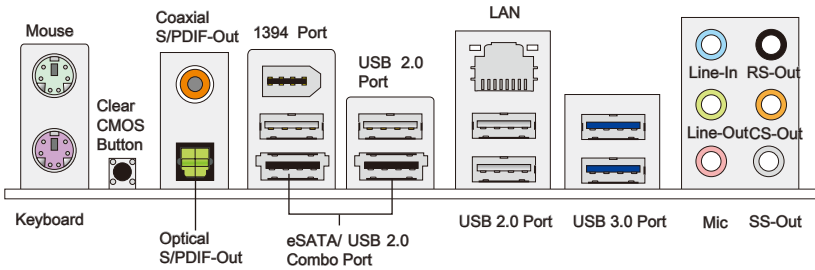

▶ Mouse/Keyboard

The standard PS/2® mouse/keyboard DIN connector is for a PS/2® mouse/keyboard.

▶ Clear CMOS Button

There is a CMOS RAM on board that has a power supply from external battery to keep the system configuration data. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, use the button to clear data. Press the button to clear the data.

Important

- *Make sure that you power off the system before clearing CMOS data.*
- *After pressing this button to clear CMOS data in power off (G3) state, the system will boot automatically.*

▶ Coaxial S/PDIF-Out

This SPDIF (Sony & Philips Digital Interconnect Format) connector is provided for digital audio transmission to external speakers through a coaxial cable.

▶ Optical S/PDIF-Out

This SPDIF (Sony & Philips Digital Interconnect Format) connector is provided for digital audio transmission to external speakers through an optical fiber cable.

▶ 1394 Port

The IEEE1394 port on the back panel provides connection to IEEE1394 devices.

▶ USB 2.0 Port

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices. Supports data transfer rate up to 480Mbit/s (Hi-Speed).

► USB 3.0 Port

USB 3.0 port is backward-compatible with USB 2.0 devices. Supports data transfer rate up to 5 Gbit/s (SuperSpeed).

Important

 
If you want to use a USB 3.0 device, you must use the USB 3.0 cable to connect to the USB 3.0 port.

► eSATA/ USB 2.0 Combo Port

The eSATA/USB 2.0 combo port is for attaching the eSATA external hard drive or USB 2.0 device.

► LAN

The standard RJ-45 LAN jack is for connection to the Yellow Local Area Network (LAN). You can connect a network cable to it.



LED	Color	LED State	Condition
Left	Yellow	Off	LAN link is not established.
		On(Steady state)	LAN link is established.
		On(brighter & pulsing)	The computer is communicating with another computer on the LAN.
Right	Green	Off	10 Mbit/sec data rate is selected.
		On	100 Mbit/sec data rate is selected.
	Orange	On	1000 Mbit/sec data rate is selected.

► Audio Ports


These audio connectors are used for audio devices. It is easy to differentiate between audio effects according to the color of audio jacks.

- Line-In (Blue) - Line In, is used for external CD player, tape-player or other audio devices.
- Line-Out (Green) - Line Out, is a connector for speakers or headphones.
- Mic (Pink) - Mic, is a connector for microphones.
- RS-Out (Black) - Rear-Surround Out in 4/ 5.1/ 7.1 channel mode.
- CS-Out (Orange) - Center/ Subwoofer Out in 5.1/ 7.1 channel mode.
- SS-Out (Gray) - Side-Surround Out 7.1 channel mode.


Connectors

Serial ATA Connector: SATA1~6

This connector is a high-speed Serial ATA interface port. Each connector can connect to one Serial ATA device.

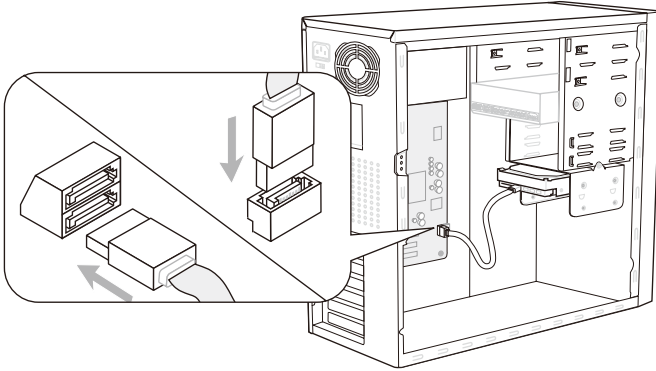

* The MB layout in this figure is for reference only.

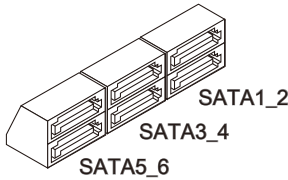


SATA1~6 (6Gb/s)
supported by SB950

Important

Please do not fold the Serial ATA cable into 90-degree angle. Otherwise, data loss may occur during transmission.


Chassis Intrusion Connector: JCI1

This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.

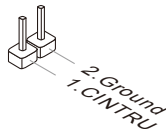

Fan Power Connectors: CPUFAN, SYSFAN1~4

The fan power connectors support system cooling fan with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND. If the mainboard has a System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

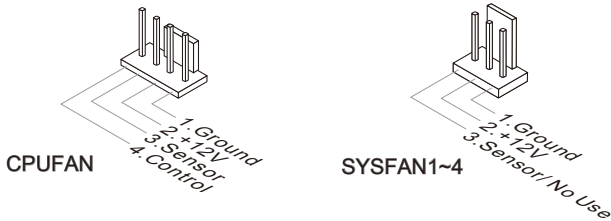


Important

- Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.
- CPUFAN supports fan control. You can install **Control Center** utility that will automatically control the CPU fan speed according to the actual CPU temperature.
- Fan cooler set with 3 or 4 pins power connector are both available for CPUFAN.



Front Panel Audio Connector: JAUD1

This connector allows you to connect the front panel audio and is compliant with Intel® Front Panel I/O Connectivity Design Guide.

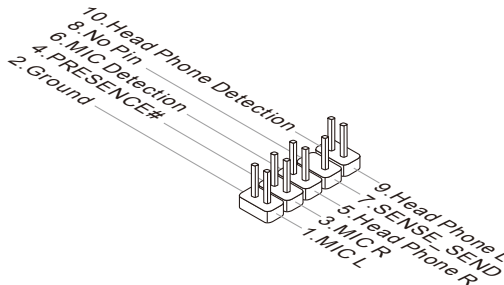


Front Panel Connectors: JFP1, JFP2

These connectors are for electrical connection to the front panel switches and LEDs. The JFP1 is compliant with Intel® Front Panel I/O Connectivity Design Guide.

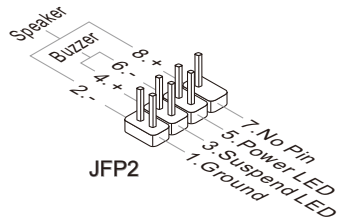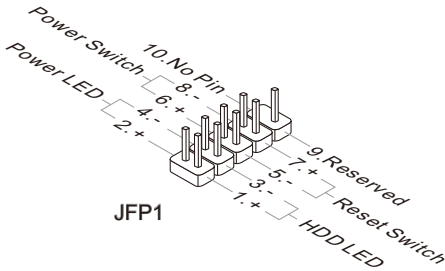

S/PDIF-Out Connector: JSP1

This connector is used to connect S/PDIF (Sony & Philips Digital Interconnect Format) interface for digital audio transmission.

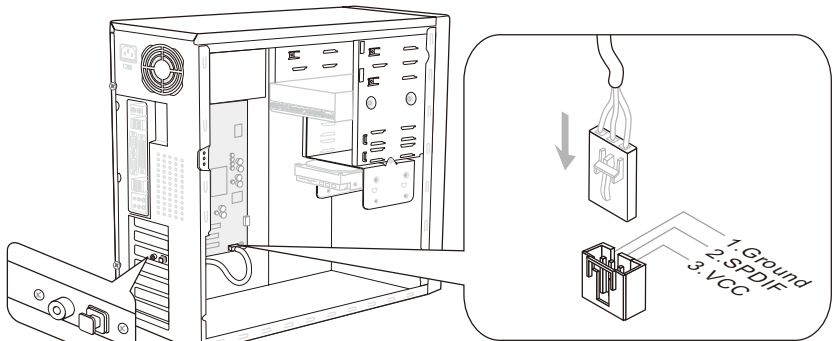

* The MB layout in this figure is for reference only.


S/PDIF-Out Bracket (optional)

Front USB 2.0 Connector: JUSB1, JUSB2

This connector, compliant with Intel® I/O Connectivity Design Guide, is ideal for connecting high-speed USB interface peripherals such as USB HDD, digital cameras, MP3 players, printers, modems and the like.

The **JUSB1 (red mark)** supports the MSI newly Super-Charger technology which provides fast charging function anytime for charging your Smartphone.

If your system is in S0 / S1 state, you must install MSI's application, SuperCharger, to control the **JUSB1**. When the application is set to "On", it can fast charge Smartphone via **JUSB1** but the data transmission and synchronization will be disabled. When the application is set to "Off", the **JUSB1** will work as a normal USB connector. In S3 / S4 / S5 state, **JUSB1** can still provides fast charging function without operating system, no matter you un-plug and re-plug the Smartphone.

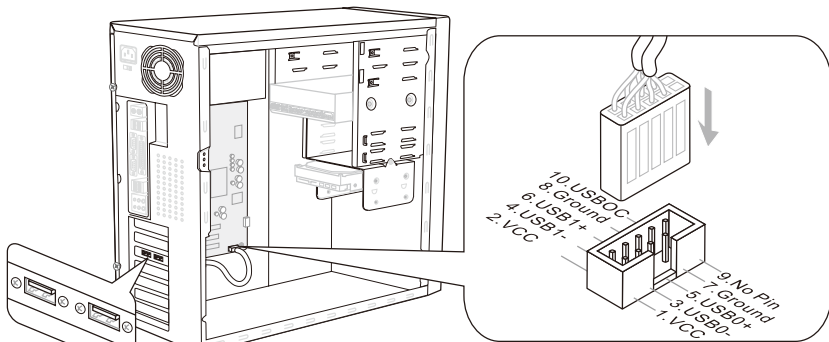

* The MB layout in this figure is for reference only.


↓
USB 2.0 Bracket (optional)

Important

- Note that the pins of VCC and GND must be connected correctly to avoid possible damage.
- For iPad, **JUSB1 (red mark)** can still charge iPad in S3, S4, S5 state.
- Please note that connecting one device once for stable charging is recommended.
- Super-Charger technology would be available on specific models, please refer to MSI website for model support list.
- We recommend that don't disconnect the device when you charge it in S1 state.

Front USB Connector: JUSB3

USB 3.0 port is backward-compatible with USB 2.0 devices. Supports data transfer rate up to 5 Gbit/s (SuperSpeed).

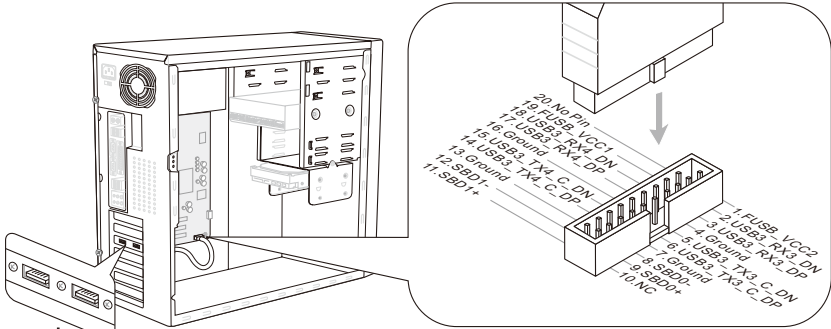

* The MB layout in this figure is for reference only.


USB 3.0 Bracket (optional)

Important

- Note that the pins of VCC and GND must be connected correctly to avoid possible damage.
- If you want to use a USB 3.0 device, you must use the USB 3.0 cable to connect to the USB 3.0 port.

IEEE1394 Connector: J1394_1

This connector allows you to connect the IEEE1394 device via an optional IEEE1394 bracket.

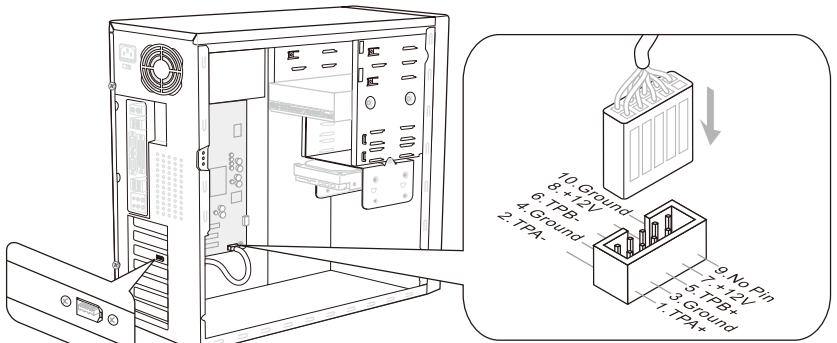


* The MB layout in this figure is for reference only.

1394 Bracket (optional)

TPM Module connector: JTPM1


This connector connects to a TPM (Trusted Platform Module) module (optional). Please refer to the TPM security platform manual for more details and usages.

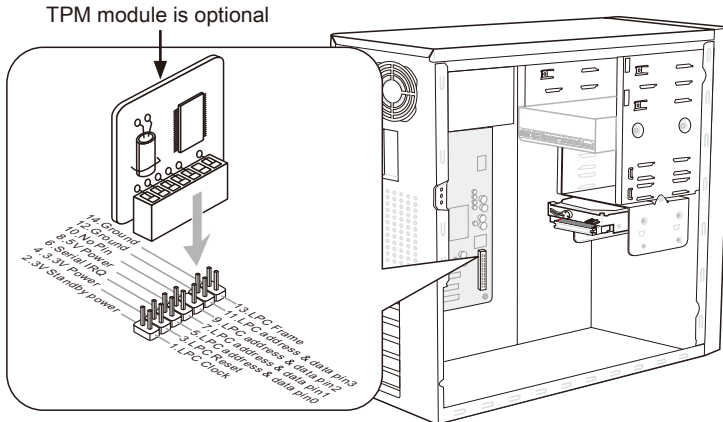

* The MB layout in this figure is for reference only.

Serial Port Connector: JCOM1

This connector is a 16550A high speed communication port that sends/ receives 16 bytes FIFOs. You can attach a serial device.

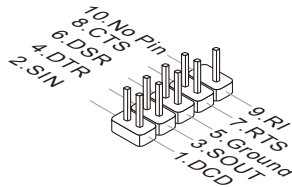

Jumpers

Clear CMOS Jumper: JBAT1

There is a CMOS RAM onboard that has a power supply from an external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, set the jumper to clear data.



JBAT1



Keep Data



Clear Data

Important

You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the mainboard.

Buttons

This section will explain how to change your motherboard's function through the use of following buttons.

OC Genie Button: TURBO1

This button is used to auto-overclock for the system. Press this button to enable the OC Genie function when the system is in power off state, meanwhile, the button will light and lock. And then the system will automatically detect the optimum values to overclock after booting the system. To disable the OC Genie function, please press the button again after power off the system, meanwhile, the button light will off and unlock, and the system will restore the default for next boot.



Important

Please install the DDR3 1333 and up memory and equip better heat sink/ cooler with OC Genie function.

We do not guarantee the OC Genie overclocking range and the damages or risks caused by the OC Genie overclocking behavior.

You can disable the OC Genie function in BIOS setup. And we suggest you to save the OC Genie configuration to overclocking profile in BIOS for future using.

Power Button: POWER1

This power button is used to turn-on or turn-off the system. Press the button to turn-on or turn-off the system.



Reset Button: RESET1


This reset button is used to reset the system. Press the button to reset the system.



Slots


PCIE (Peripheral Component Interconnect Express) Slot

The PCIE slot supports the PCIE interface expansion card.

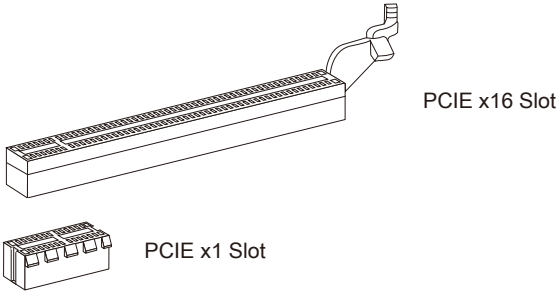

PCI (Peripheral Component Interconnect) Slot

The PCI slot supports LAN card, SCSI card, USB card, and other add-on cards that comply with PCI specifications.

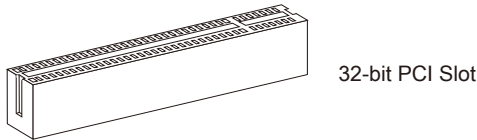

Important


When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

PCI Interrupt Request Routing

The IRQ, acronym of interrupt request line and pronounced I-R-Q, are hardware lines over which devices can send interrupt signals to the microprocessor. The PCI IRQ pins are typically connected to the PCI bus pins as follows:

	Order1	Order2	Order3	Order4
PCI Slot1	INT E#	INT F#	INT G#	INT H#

LED Status Indicators

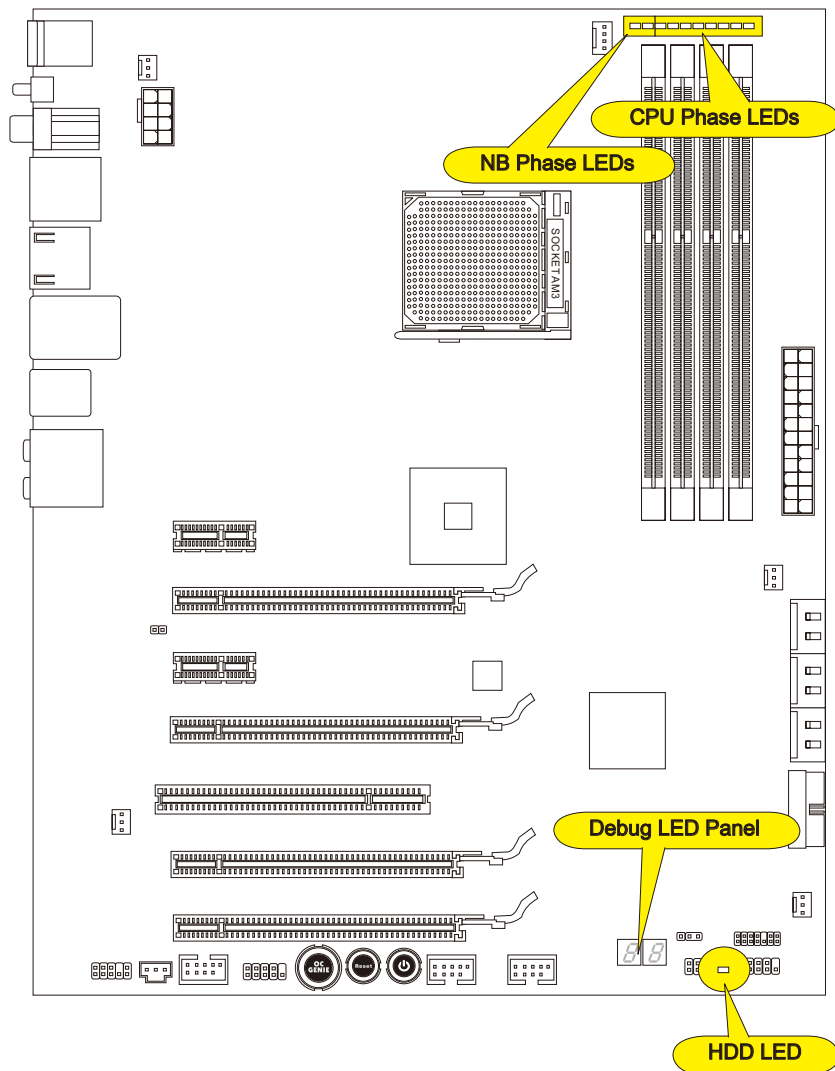

NB Phase LED

These LEDs indicate the current North Bridge power phase mode. Follow the instructions below to read.

Lights Off

North Bridge is in 1 phase power mode.

North Bridge is in 2 phase power mode.

CPU Phase LED panel

These LEDs indicate the current CPU power phase mode. Follow the instructions below to read.

Lights Off

CPU is in 1 phase power mode.

CPU is in 2 phase power mode.

CPU is in 3 phase power mode.

CPU is in 4 phase power mode.

CPU is in 5 phase power mode.

CPU is in 6 phase power mode.

CPU is in 7 phase power mode.

CPU is in 8 phase power mode.


HDD LED

Lights when the hard drive is operating.

Debug LED Panel

Please refer to the table below to get more information about the Debug LED message.

Post	Status
D1	Perform keyboard controller BAT test. Check if waking up from power management suspend state. Save power-on CPUID value in scratch CMOS.
03	Disable NMI, Parity, video for EGA, and DMA controllers. Initialize BIOS, POST, Runtime data area. Also initialize BIOS modules on POST entry and GPNV area. Initialize CMOS as mentioned in the Kernel Variable "wC-MOSFlags".
0C	Detects the presence of Keyboard in KBC port.
13	Early POST initialization of chipset registers.
2A	Initializes different devices through DIM.
2C	Initializes different devices. Detects and initializes the video adapter installed in the system that have optional ROMs.
37	Displaying sign-on message, CPU information, setup key message and any OEM specific information.
38	Initializes different devices through DIM.
3C	Mid POST initialization of chipset registers.
60	Initializes NUM-LOCK status and programs the KBD typematic rate.
75	Initializes INT-13 and prepare for IPL detection.
78	Initializes IPL devices controlled by BIOS and option ROMs.
8C	Late POST initialization of chipset registers.
00	Passes control to OS Loader (typically INT 19h).

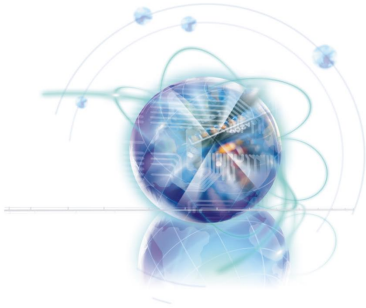

Chapter 3

BIOS Setup

This chapter provides information on the BIOS Setup program and allows you to configure the system for optimum use.

You may need to run the Setup program when:

- An error message appears on the screen during the system booting up, and requests you to run SETUP.
- You want to change the default settings for customized features.

Entering Setup

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press key to enter Setup.

Press DEL to enter Setup Menu, F11 to enter Boot Menu

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it OFF and On or pressing the RESET button. You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Important

- *The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.*
- *Upon boot-up, the 1st line appearing after the memory count is the BIOS version. It is usually in the format:*

E7640AMS.xxx 041211 where:

1st digit refers to BIOS type as E = EFI

2nd - 5th digit refers to the model number.




6th digit refers to the chipset as I = Intel, N = nVidia, A = AMD and V = VIA.

7th - 8th digit refers to the customer as MS = all standard customers.

xxx refers to the BIOS version.

041211 refers to the date this BIOS was released.

Control

Keyboard	Mouse	Description
<↑><↓>		Select Item
<←><→>	Move the cursor	Select Screen
<Enter>	 Click/ Double-click the left button	Select Icon/ Field
<Esc>	 Click the right button	Jumps to the Exit menu or returns to the previous from a submenu
<+>	X	Increase the numeric value or make changes
<->		Decrease the numeric value or make changes
<F1>		General Help
<F4>		CPU Specifications
<F5>		Enter Memory-Z
<F6>		Load optimized defaults
<F10>		Save Change and Reset
<Esc>		Exit


Sub-Menu

If you find a right pointer symbol (as shown in the right view) appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use arrow keys (↑ ↓) or mouse to highlight the field and press <Enter> or double-click the left mouse button to enter the sub-menu. Then you can use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the previous menu, just press the <Esc > or click the right mouse button.

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

The Menu Bar

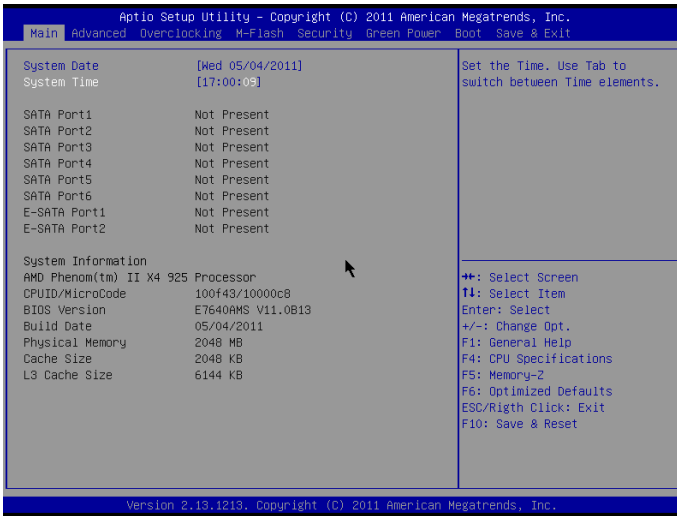

► **Main Menu**

Use this menu for basic system configurations, such as time, date etc.

► **Advanced**

Use this menu to setup the items of the BIOS special enhanced features, integrated peripherals, power management and PC health status.

► **Overclocking**

Use this menu to specify your settings for frequency/voltage control and overclocking.

► **M-Flash**

Use this menu to read/ flash the BIOS from storage drive (FAT/ FAT32 format only).

► **Security**

Use this menu to set supervisor and user passwords.

► **Green Power**

Use this menu to specify the power phase.


► **Boot**

Use this menu to specify the priority of boot devices.

► **Save & Exit**

This menu allows you to load the BIOS default values or factory default settings into the BIOS and exit the BIOS setup utility with or without changes.

Main Menu

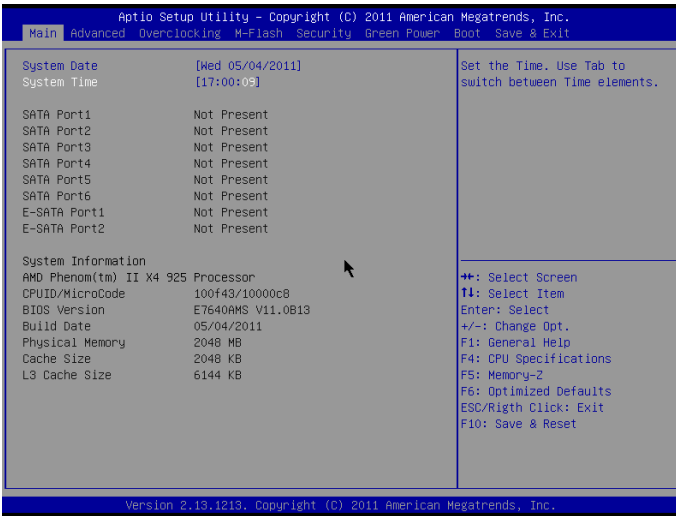

► System Date

This allows you to set the system to the date that you want (usually the current date). The format is <day><month> <date> <year>.

[day]	Day of the week, from Sun to Sat, determined by BIOS. Read-only.
[month]	The month from Jan. through Dec.
[date]	The date from 1 to 31 can be keyed by numeric function keys.
[year]	The year can be adjusted by users.

► System Time

This allows you to set the system time that you want (usually the current time). The time format is <hour> <minute> <second>.

► SATA Port1~6, E-SATA Port1~2

Press <Enter> to enter the sub-menu. The sub-menu shows the information of installed SATA device.


Important

SATA Port1~6, E-SATA Port1~2 are appearing when you connect the HD devices to the SATA connectors on the mainboard.

► System Information


This area shows the CPU information, BIOS version and memory status of your system (read only).

Advanced

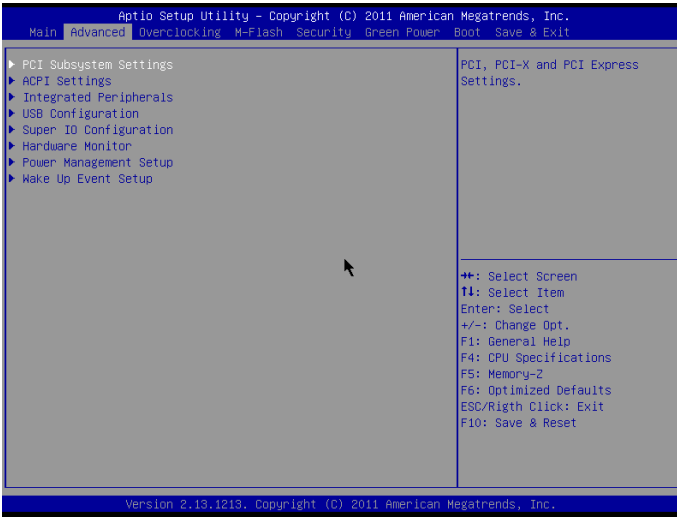

► PCI Subsystem Settings

 Press <Enter> to enter the sub-menu.




► PCI Latency Timer

This item controls how long each PCI device can hold the bus before another takes over. When set to higher values, every PCI device can conduct transactions for a longer time and thus improve the effective PCI bandwidth. For better PCI performance, you should set the item to higher values.

► ACPI Settings

 Press <Enter> to enter the sub-menu.



► ACPI Standby State


This item specifies the power saving modes for ACPI function.

► Power LED

This item configures how the system uses power LED on the case to indicate the sleep/suspend state.

► Integrated Peripherals

Press <Enter> to enter the sub-menu.

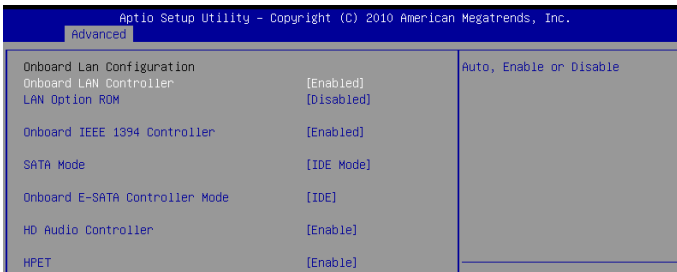

► Onboard Lan Controller

This item allows you to enable/ disable the onboard LAN controller.

► LAN Option ROM

This item is used to decide whether to invoke the Boot ROM of the onboard LAN.

► Onboard IEEE 1394 Controller

This item allows you to enable/ disable the onboard IEEE 1394 controller.

► SATA Mode

This item is used to specify a mode for SATA port.

► Onboard E-SATA Controller Mode

This item is used to specify a mode for E-SATA port.

► HD Audio Controller


This item allows you to enable/ disable the HD audio controller.

► HPET

The HPET (High Precision Event Timers) is a component that is part of the chipset. You can to enable it, and will provide you with the means to get to it via the various ACPI methods.

► USB Configuration

Press <Enter> to enter the sub-menu.

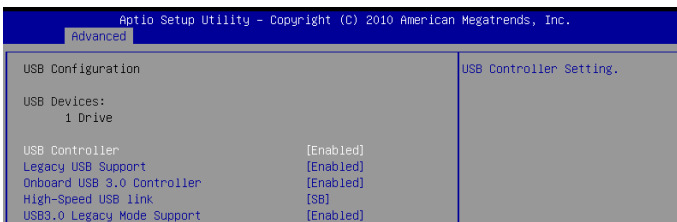

► USB Devices:

This item shows the type of installed USB device.

▶ **USB Controller**

This item allows you to enable/ disable the USB controller.

▶ **Legacy USB Support**

Set to [Enabled] if you need to use any USB 1.1/2.0 device in the operating system that does not support or have any USB 1.1/2.0 driver installed, such as DOS and SCO Unix. Set to [Disabled] only if you want to use any USB device other than the USB mouse.

▶ **Onboard USB 3.0 Controller**

This item allows you to enable/ disable the onboard USB 3.0 controller.

▶ **High-Speed USB Link**

 
This item allows you to select the USB 2.0 source chip. Set to [SB] if you like to allocate the USB 2.0 ports to South Bridge. Set to [Standard] the USB 2.0 ports will be allocated to NEC chip.

▶ **USB 3.0 Legacy Mode Support**

Set to [Enabled] if you need to use any USB 1.1/2.0/3.0 device in the operating system that does not support or have any USB 1.1/2.0/3.0 driver installed, such as DOS and SCO Unix. Set to [Disabled] only if you want to use any USB device other than the USB mouse.


▶ **Super IO Configuration**

Press <Enter> to enter the sub-menu.



▶ **Serial Port 0 Configuration**

 Press <Enter> to enter the sub-menu.



▶ **Serial (COM) Port0**


This item allows you to enable/ disable the serial port.

▶ **Serial (COM) Port0 Settings**

Select an address and corresponding interrupt for the serial port.

► Hardware Monitor

Press <Enter> to enter the sub-menu.

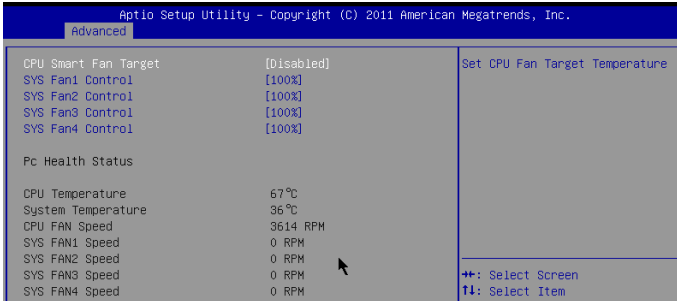

► CPU Smart Fan Target

The Smart Fan function controls the CPU fan speed automatically depending on the current temperature to keep it within a specific range. You can enable a fan target value here. If the current CPU fan temperature reaches the target value, the smart fan function will be activated.

► SYS Fan 1~4 Control

 
These items allow users to select how percentage of speed for the SYSFAN1~4.

► CPU/ System Temperature, CPU FAN/ SYS FAN 1~4 Speed

These items show the current status of all of the monitored hardware components such as CPU/ system temperatures and all fans' speeds.

► Power Management Setup

Press <Enter> to enter the sub-menu.



► EUP 2013

This item is designed for Energy Using Products Lot 6 2013 (EuP) aka Energy Related Products (ErP). To reduce Power Consumption when system off or standby mode.

Note: When "Enabled" EUP 2013 setting, system don't support RTC wake up event function.


► Restore on AC Power Loss

This item specifies whether your system will reboot after a power failure or interrupt occurs. Settings are:

- [Power Off] Always leaves the computer in the power off state.
- [Power On] Always leaves the computer in the power on state.
- [Last State] Restore the system to the status before power failure or interrupt occurred.

► **Wake Up Event Setup**

Press <Enter> to enter the sub-menu.

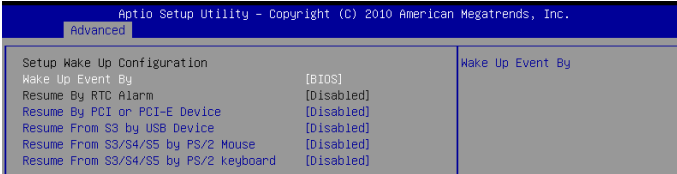

► **Wake Up Event By**

Setting to [BIOS] activates the following fields, and use the following fields to set the wake up events. Setting to [OS], the wake up events will be defined by OS.

► **Resume By RTC Alarm**

The field is used to enable or disable the feature of booting up the system on a scheduled time/date.

► **Date/ HH:MM:SS**

If Resume By RTC Alarm is set to [Enabled], the system will automatically resume (boot up) on a specific date/hour/minute/second specified in these fields (using the <+> and <-> to select the date & time settings).

► **Resume By PCI or PCI-E Device**

When set to [Enabled], the feature allows your system to be awakened from the power saving modes through any event on PCI or PCIE device.


► **Resume From S3 by USB Device**

The item allows the activity of the USB device to wake up the system from S3 (Suspend to RAM) sleep state.

► **Resume From S3 by PS/2 Mouse/ Keyboard**

These items determine whether the system will be awakened from S3 state when input signal of the PS/2 mouse/ keyboard is detected.

Overclocking

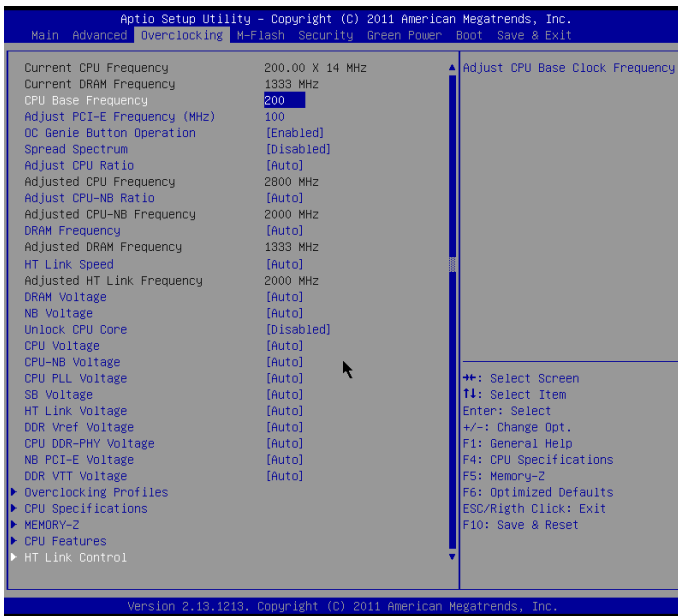

► Current CPU / DRAM Frequency

These items show the current clocks of CPU and Memory speed. Read-only.

► CPU Base Frequency

This item is used to adjust the CPU base frequency (in MHz).

► Adjust PCI-E Frequency (MHz)

This field allows you to select the PCI-E frequency (in MHz).

► OC Genie Button Operation

This field is used to enable/ disable OC Genie function.

► Spread Spectrum

When the motherboard's clock generator pulses, the extreme values (spikes) of the pulses create EMI (Electromagnetic Interference). The Spread Spectrum function reduces the EMI generated by modulating the pulses so that the spikes of the pulses are reduced to flatter curves.

Important

- If you do not have any EMI problem, leave the setting at [Disabled] for optimal system stability and performance. But if you are plagued by EMI, select the value of Spread Spectrum for EMI reduction.

- *The greater the Spread Spectrum value is, the greater the EMI is reduced, and the system will become less stable. For the most suitable Spread Spectrum value, please consult your local EMI regulation.*
- *Remember to disable Spread Spectrum if you are overclocking because even a slight jitter can introduce a temporary boost in clock speed which may just cause your overclocked processor to lock up.*

▶ Adjust CPU Ratio

This item is used to adjust CPU clock multiplier (ratio). It is available only when the processor supports this function.

▶ Adjusted CPU Frequency

It shows the adjusted CPU frequency. Read-only.

▶ Adjust CPU-NB Ratio

This item is used to adjust CPU-NB ratio.

▶ Adjusted CPU-NB Frequency

It shows the adjusted CPU-NB frequency. Read-only.

▶ DRAM Frequency

This item is used to adjust the DRAM frequency. Setting to [Auto], the system will detect the DRAM Frequency automatically.

▶ Adjusted DRAM Frequency

It shows the adjusted Memory frequency. Read-only.

▶ HT Link Speed

This item allows you to set the Hyper-Transport Link speed. Setting to [Auto], the system will detect the HT link speed automatically.

▶ Adjusted HT Link Frequency

It shows the adjusted HT Link frequency. Read-only.

▶ DRAM Voltage/ NB Voltage/ CPU Voltage/ CPU-NB Voltage/ CPU PLL Voltage/ SB Voltage/ HT Link Voltage/ DDR Vref Voltage/ CPU DDR-PHY Voltage/ NB PCI-E Voltage/ DDR VTT Voltage

These items are used to adjust the voltage of CPU, Memory and chipset.

▶ Overclocking profiles

Press <Enter> to enter the sub-menu.



▶ Overclocking Profile 1/ 2/ 3/ 4/ 5/ 6

Press <Enter> to enter the sub-menu. In the sub-menu, these items are used to save the current settings, and you can to load the settings from the stored profile.

▶ OC Retry Count

When overclocking has failed, setting this item as [1, 3] will allow system to reboot

1/3 times with the same overclocked configuration. If overclocking has failed every time, the system will restore the defaults.

► CPU Specifications

Press <Enter> to enter the sub-menu. The submenu shows the information of installed CPU.

Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.		
Overclocking		
AMD Phenom(tm) II X4 925 Processor		CPU Technology Support
CPUID	100f43	
MicroCode	10000c8	
CPU Frequency	2.818 GHz	
CPU Ratio	14	
Cache L1	64KB	
Cache L2	2048KB	
Cache L3	6144KB	
Core VID	1.2750V	
Current Core VID	1.296V	
Core Number	4	
CPU Stepping	3	
► CPU Technology Support		

► CPU Technology Support

Press <Enter> to enter the sub-menu. The sub-menu shows the installed CPU technologies. Read only.

► MEMORY-Z

Press <Enter> to enter the sub-menu.

Aptio Setup Utility - Copyright (C) 2010 American Megatrends, Inc.		
Overclocking		
► DIMM4 Memory SPD		Memory SPD Configuration

► DIMM1~4 Memory SPD

Press <Enter> to enter the sub-menu. The sub-menu displays the informations of installed memory.

► CPU Features

Press <Enter> to enter the sub-menu.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Overclocking		
C1E	[Disabled]	Enable this feature will let your system utilize the AMD specific ACPI states to save
SVM Mode	[Enabled]	
IOMMU Mode	[Disabled]	

► C1E

Enable this item to reduce the CPU power consumption while idle. Not all processors support Enhanced Halt state (C1E).

► SVM Mode

 
This item allows you to enable/disable the AMD SVM (Secure Virtual Machine) Mode.

► IOMMU Mode

This item allows you to enable/disable the IOMMU (I/O Memory Management Unit) for I/O virtualization.

▶ HT Link Control


Press <Enter> to enter the sub-menu.



▶ HT Incoming/ Outgoing Link Width

These items allow you to set the Hyper-Transport Link width. Setting to [Auto], the system will detect the HT link width automatically.

M-Flash

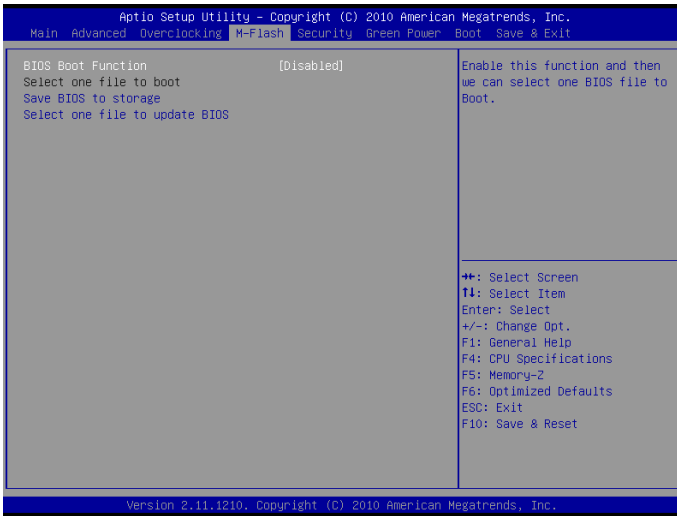

► BIOS Boot Function

This allows you to enable/ disable the system to boot from the BIOS file inside USB drive (FAT/ 32 format only).

► Select one file to Boot

When the BIOS Boot function as sets to [Enabled], this item is selectable. This item allows to select particular BIOS file from the USB/ Storage (FAT/ 32 format only) drive. And the system will boot from selected BIOS file.


► Save BIOS to storage

Please setup a specific folder in specific USB/ Storage drive to save BIOS file from BIOS ROM chip data. Note: it only supports FAT/ 32 file system drive.

► Select one file to update BIOS

This item allows you to select particular BIOS file from the USB/ Storage (FAT/ 32 format only) drive for updating BIOS.

Security

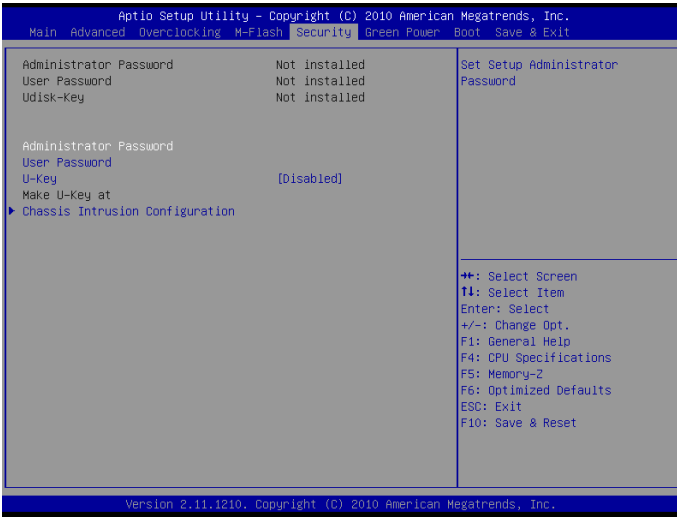

► **Administrator Password**

This item is used to set the administrator password. When a administrator password has been set, you will be prompted to enter it every time you try to enter BIOS Setup.

► **User Password**

This item is used to set the user password. When a user password has been set, you will be prompted to enter it every time you try to enter the operating system.

Important

When you select the Administrator Password / User Password item, a password box will appear on the screen. Type the password, and press <Enter>. The password typed now will replace any previously set password from CMOS memory. You will be prompted to confirm the password. Retype the password and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To clear a set password, just press <Enter> when you are prompted to enter the password. A message will show up confirming the password will be disabled. Once the password is disabled, the system will boot and you can enter Setup/ OS without entering any password.

These two items prevent an unauthorized person from changing any part of your system configuration.

► **U-Key**

This item is used to enable/ disable USB drive as a key.

► Make U-Key at

When the “U-Key” as sets to [Enabled], this item is selectable. This item allows you to specify the USB drive.


► Chassis Intrusion Configuration

Press <Enter> to enter the sub-menu.

► Chassis Intrusion

This item enables or disables the feature of recording the chassis intrusion status and issuing a warning message if the chassis is once opened. To clear the warning message, set the field to [Reset]. The setting of the field will automatically return to [Enabled] later.

Green Power

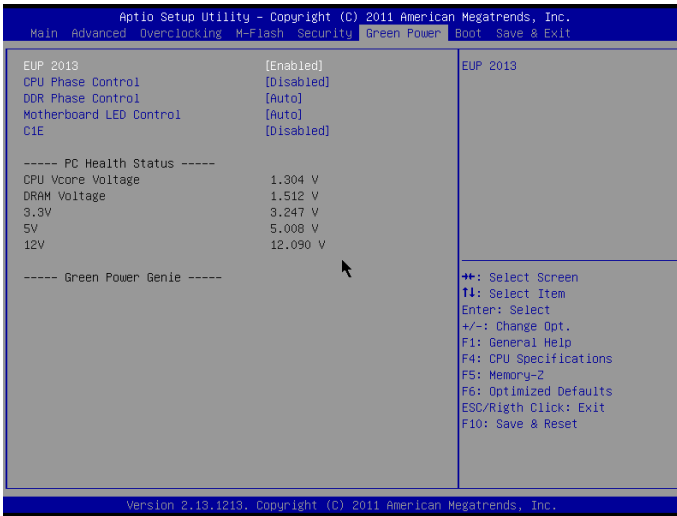

► **EUP 2013**

This item is designed for Energy Using Products Lot 6 2013 (EuP) aka Energy Related Products (ErP). To reduce Power Consumption when system off or standby mode.

Note: When “Enabled” EuP 2013 setting, system don’t support RTC wake up event function.

► **CPU Phase Control**

This item allows you to select the CPU power phase mode to reach the best power saving function.


► **DDR Phase Control**

This item allows you to select the DDR power phase mode to reach the best power saving function.

► **C1E**

Enable this item to reduce the CPU power consumption while idle. Not all processors support Enhanced Halt state (C1E).

Boot

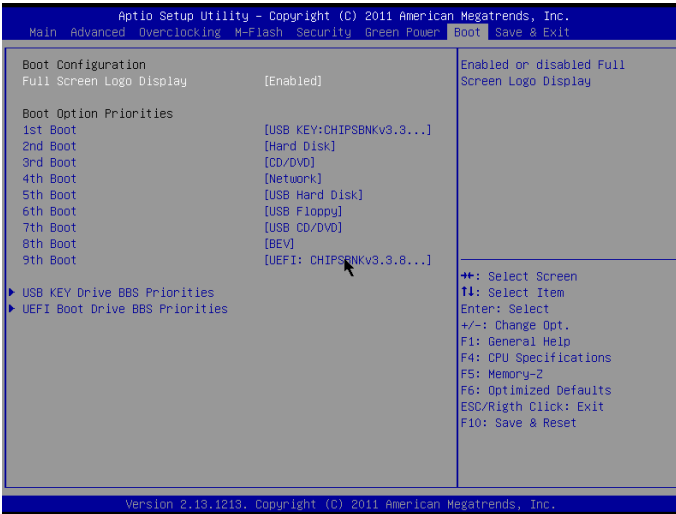

► Full Screen Logo Display

This item enables this system to show the company logo on the boot-up screen. Settings are:

- [Enabled] Shows a still image (logo) on the full screen at boot.
- [Disabled] Shows the POST messages at boot.

== Boot Option Priorities ==

► 1st~9th Boot


You can select the boot priorities in these Boot Option items.

► USB KEY Drive/ UEFI Boot Drive BBS Priorities

► Boot Option

You can select the USB KEY Drive/ UEFI Boot priorities in these Boot Option items.

Save & Exit

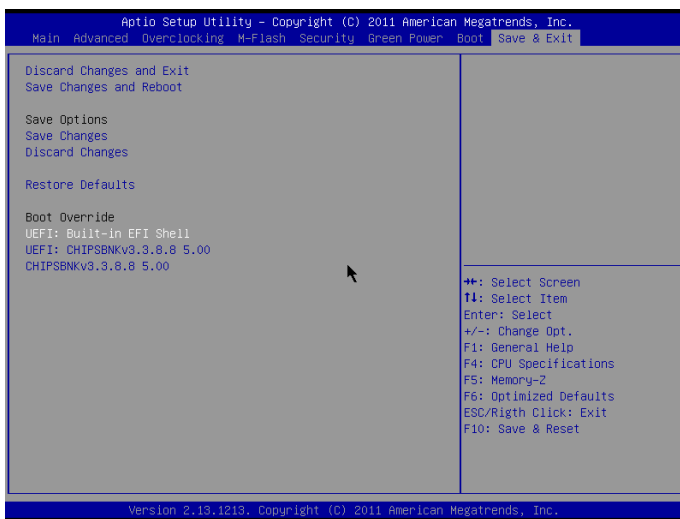

► Discard Changes and Exit

Use this item to abandon all changes and exit setup.

► Save Changes and Reboot

Use this item to save changes and reset the system.

► Save Changes

Use this item to save changes.

► Discard Changes

Use this item to abandon all changes.

► Restore Defaults


Use this item to load the optimized default values set by the BIOS vendor.

== Boot Override ==

The installed storage devices will appear on this menu, you can select one of them be a boot device.

► Built-in EFI Shell

Use this item to enter the EFI Shell.

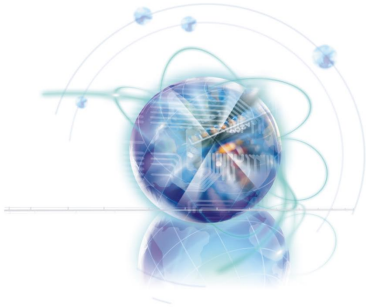

Appendix A

Realtek Audio

The Realtek audio provides 10-channel DAC that simultaneously supports 7.1 sound playback and 2 channels of independent stereo sound output (multiple streaming) through the Front-Out-Left and Front-Out-Right channels.

Installing the Realtek HD Audio Driver

You need to install the HD audio driver for Realtek audio codec to function properly before you can get access to 2-, 4-, 6-, 8- channel or 7.1+2 channel audio operations. Follow the procedures described below to install the drivers for different operating systems.

Installation for Windows®

For Windows® XP, you must install Windows® XP Service Pack3 or later before installing the driver.

The following illustrations are based on Windows®7 environment and could look slightly different if you install the drivers in different operating systems.

1. Insert the application DVD into the DVD-ROM drive. The setup screen will automatically appear.
2. Click Driver tab.
3. Click AUDIO button.



4. Select Realtek HD Audio Drivers to start installing the drivers.
5. Click Next to install the Realtek High Definition Audio Driver.
6. Follow the on-screen instructions to install drivers.
7. Click Finish to restart the system.

Important

The HD Audio Configuration software utility is under continuous update to enhance audio applications. Hence, the program screens shown here in this section may be slightly different from the latest software utility and shall be held for reference only.

Software Configuration

After installing the audio driver, the “Realtek HD Audio Manager” icon will appear at the notification area (lower right of the screen). You may double click the icon and the GUI will pop up accordingly.




It is also available to enable the audio driver by clicking the Realtek HD Audio Manager from the Control Panel.

Software panel overview

The following figure describes the function of the Realtek HD Audio Manager panel.

Device Selection

Application Enhancement

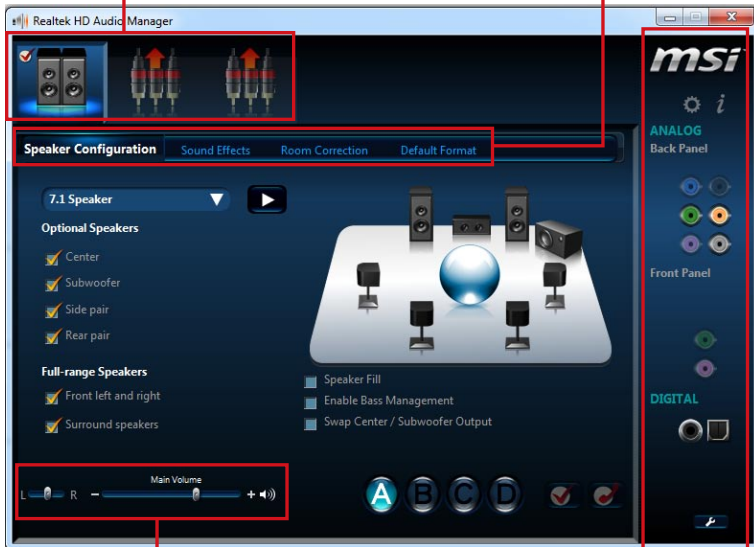

Volume Adjustment

Jack status panel

■ **Device Selection**

Here you can select a audio output source to change the related options. The “check” sign (in orange) indicates the devices as default.

■ **Volume Adjustment**

You can control the volume or balance the right/left side of the speakers that you plugged in front or rear panel by adjust the bar.

■ **Application Enhancement**


The array of options will provide you a complete guidance of anticipated sound effect for both output and input device.

■ **Jack status panel**

This panel depicts all render and capture devices currently connected with your computer.

Auto popup dialog

When you plug into the device at the jack, a dialogue window will pop up asking you which device is current connected.

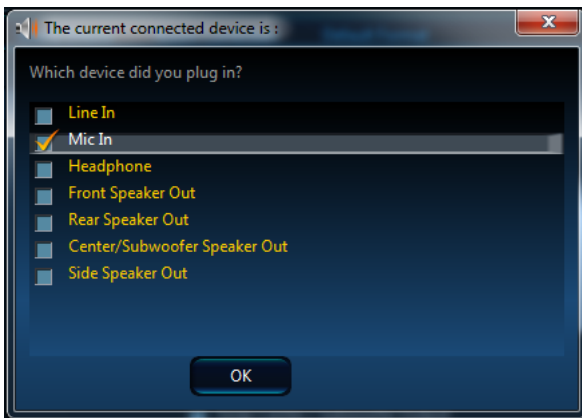


As you know, each jack corresponds to its default setting, you can refer to the next section “Hardware Default Setting”.


Hardware Default Setting

The following diagrams are audio back panel default setting.


- Backpanel audio jacks to 2-channel speakers diagram

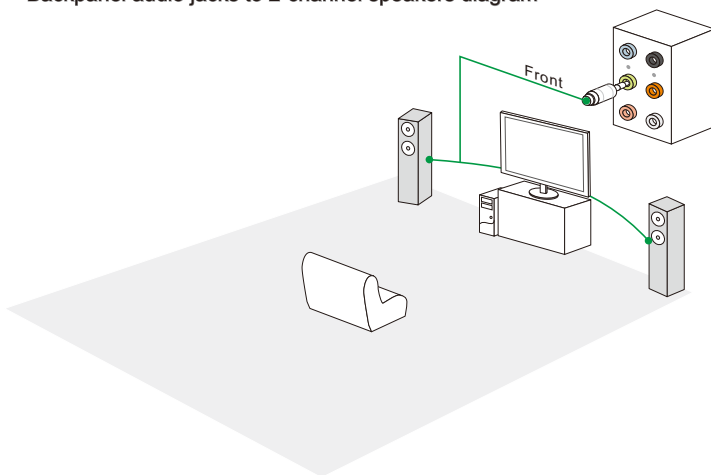


- Backpanel audio jacks to 4-channel speakers diagram

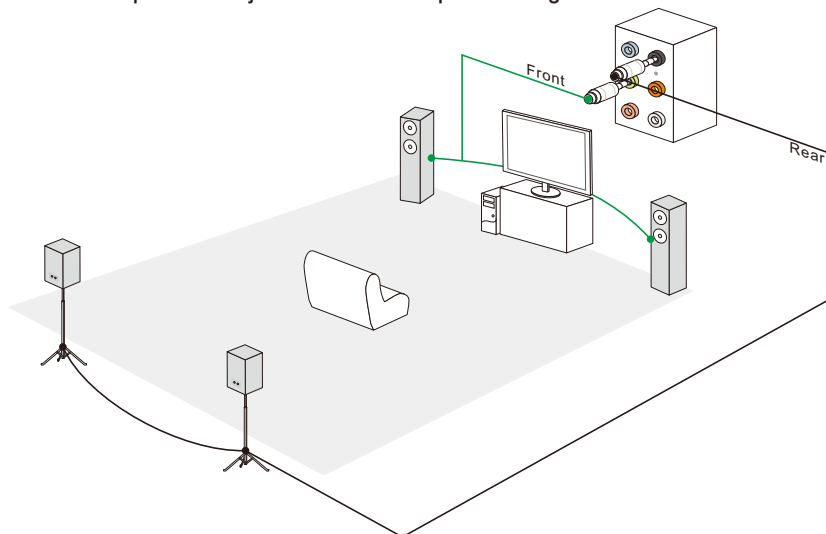


■ Backpanel audio jacks to 6-channel speakers diagram

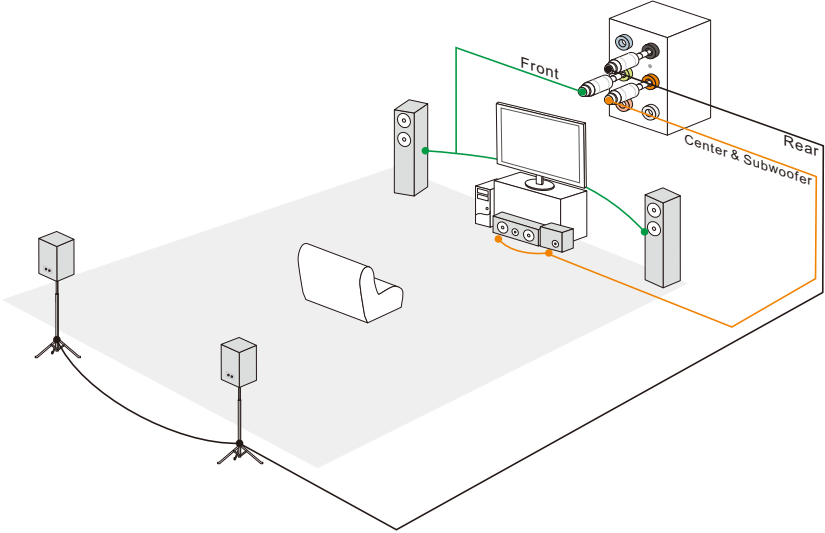

■ Backpanel audio jacks to 8-channel speakers diagram

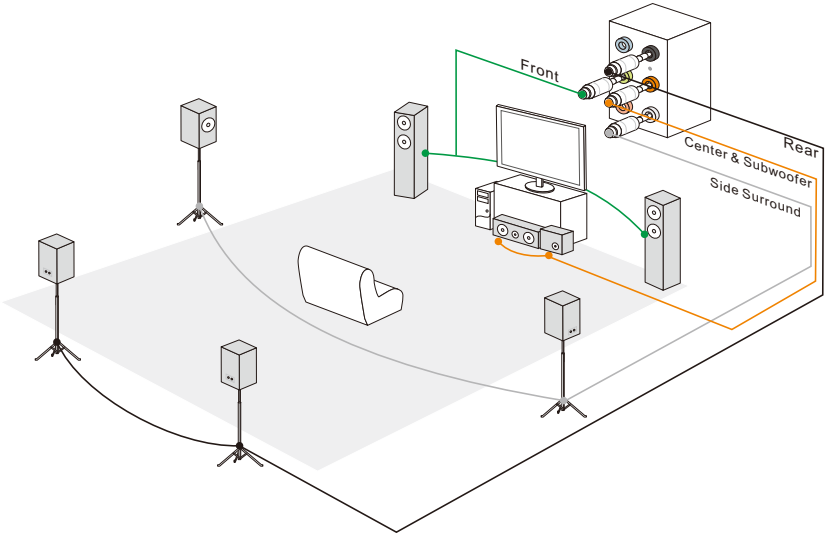

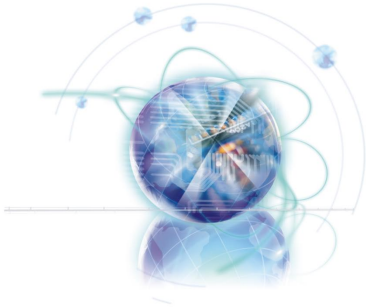

Appendix B

AMD RAID

The integrate one SATA host controller separately, and support RAID function for performance and reliability. SB950 SATA RAID provides support for RAID 0 (Striping), RAID 1 (Mirroring), RAID 10 (Striping & Mirroring) & RAID 5 (striping with parity). RAID 0 greatly improves hard disk I/O performance by concurrently striping data across multiple drives. RAID 1 makes sure data is not lost if a drive fails as data is simultaneously written to two drives. Drives configured for RAID Striping are said to form a RAID 0 set, while drives configured for RAID Mirroring are said to form a RAID 1 set. RAID 10 is implemented as a mirrored array whose segments are RAID 0 arrays. RAID 10 has same fault tolerance as mirroring and reduces overhead by striping. It needs at least four drives to form a RAID 10. RAID 5 defines techniques for parity data.

RAID Configuration


Creating and deleting RAID set and performing other RAID setting up operations are done in the RAID BIOS. During bootup, a screen similar to the one below will appear for about few seconds. Press <Ctrl-F> to enter RAID Option ROM utility.

Press <Ctrl-F> to enter RAID Option ROM utility...

Important

Be sure to enable the RAID function for SATA device in BIOS before configuring the RAID Option ROM Utility.

The RAID Option ROM utility menu screen will appear. The Main Menu is used to choose the operation to be performed.

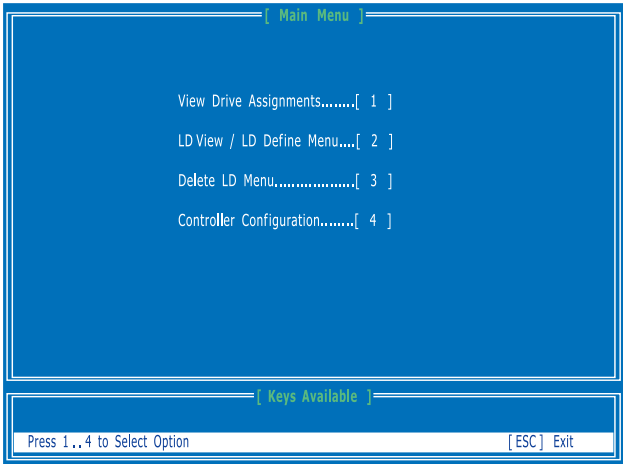

View Drives Assignments

This window displays the model number, capacities and assignment of the drives physically attached to the SATA host adapter.


[View Drives Assignments]				
Port : ID	Drive Model	Capabilities	Capacity (GB)	Assignment
01 : 00	ST32000641AS	SATA 6G	2000.39	<Single Disk>
	Extent 1		2000.39	<Single Disk>
02 : 00	ST32000641AS	SATA 6G	2000.39	<Single Disk>
	Extent 1		2000.39	<Single Disk>

[Keys Available]				
[↑] Up	[↓] Down	[PaUp / PaDn] Switch Page	[Ctrl + H] Full Erase	
[ESC] Exit				


LD View / LD Define Menu (Creating RAID)

The selection of the RAID configuration should be based upon factors including performance, data security, and the number of drives available. It is best to carefully consider the long-term role of the system and plan the data storage strategy. RAID sets can be created either automatically, or to allow the greatest flexibility, manually.


1. Press 2 on the Main Menu screen to enter the LD View Menu.

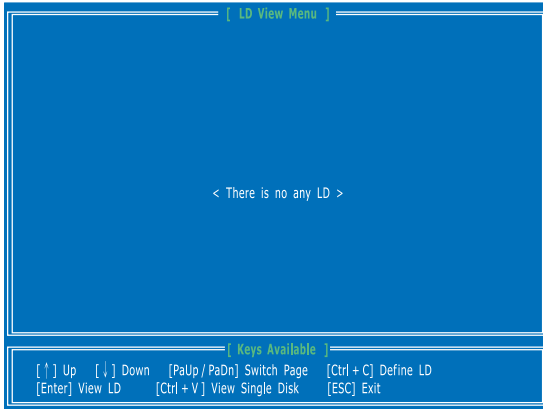


2. And then press [Ctrl + C] keys to enter the LD Define Menu. Use the space key to choose a RAID mode (RAID 0/ 1/ 10/ 5) and use the arrow key to move to the "Drives Assignments" window.

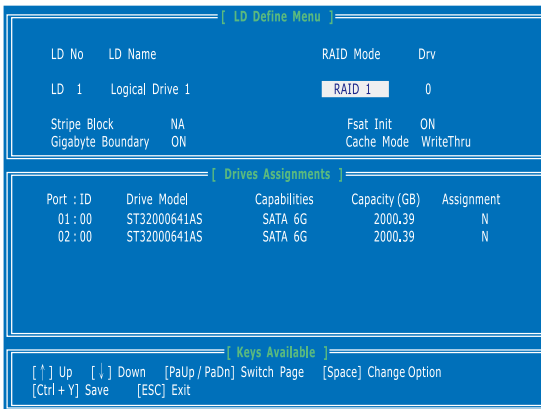


- Stripe Block Size, the default 64KB is best for most applications. RAID 0 or 10 only.
 - Gigabyte Boundary, allows use of slightly smaller replacement drives.
3. On the Drives Assignments window, use the arrow key to choose the hard drives which you want to make part of the LD, use the space key to change the assignment to "Y". Then press [Ctrl+Y] to save the configuration.

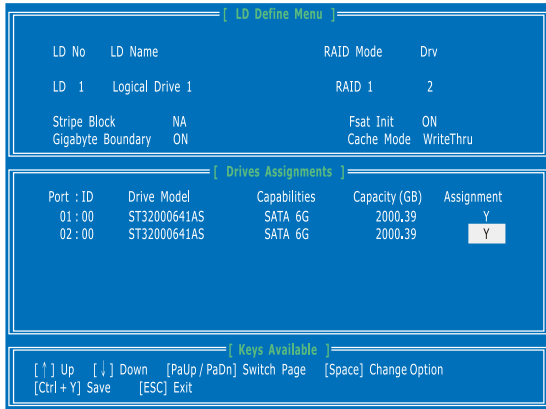


4. A message will show, press [Ctrl + Y] to input a LD name as your desire or press any key to save default LD name.

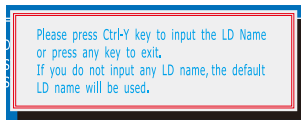

 5. Another message will show, press [Ctrl-Y] if you are sure to erase the MBR data of the disk. Or press any key to ignore this option.



 
- 6. The message will show up on the bottom, press any key to use maximum capacity or press [Ctrl-Y] to modify array capacity manually.




Important

- The default capacity is the full capacity of the selected hard drives.
- If you allocate the first LD capacity manually, you can create second LD with remaining capacity of the selected hard drives.

- 7. The LD creation is done, the screen shows the LD information as below. Press ESC key to the main screen.

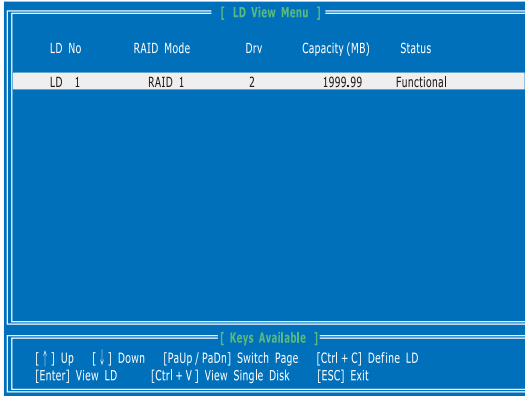

- 8. Press ESC key to exit the utility, a message "System is going to REBOOT! Are You Sure?" will display, answer "Y" to exit it and the system will reboot.

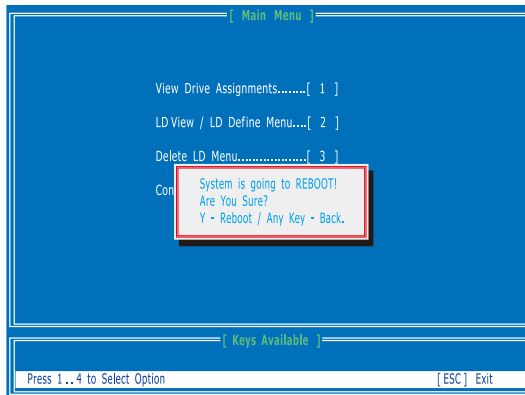

Delete LD Menu (Deleting RAID)

1. Press "3" on the main to enter the Delete LD Menu.
2. Choose a LD No. you want to delete and press [Del] or [Alt+D] delete the RAID set.

[Delete LD Menu]					
LD No	RAID Mode	Drv	Capacity (MB)	Status	
LD 1	RAID 1	2	1999.99	Functional	

[Keys Available]					
[↑] Up	[↓] Down	[PaUp / PaDn]	Switch Page	[Del / Alt+D]	Delete LD

3. On the next screen, a message will display to inform you, press "Ctrl+Y" to delete the RAID set or other key to abort it. Press "Ctrl+Y" to complete the deletion.

[View LD Definition Menu]					
LD No	LD Name	RAID Mode	Drv	Capacity (GB)	
LD 1	Logical Drive 1	RAID 1	0	1999.99	
Stripe Block	NA	Cache Mode	WriteThru		

[Drives Assignments]					
Port : ID	Drive Model	Capabilities	Capacity (GB)	Assignment	
01 : 00	ST32000641AS	SATA 6G	2000.39	N	
02 : 00	ST32000641AS	SATA 6G	2000.39	N	

Press Ctrl-Y to delete the data in the disk! Or press any other key to abort...					
--	--	--	--	--	--

Installing the RAID Driver (for bootable RAID Array)

1. After you complete the RAID BIOS setup, boot from the Windows CD, and the Windows Setup program starts.
2. Press F6 and wait for the Windows Setup screen to appear.
3. Insert the floppy that contains the RAID driver, press the "S" key to select "Specify Additional Device".

Note: for Windows Vista/ Windows 7, you can copy the files to a medium (floppy/ CD/ DVD or USB)

Important

Please follow the instruction below to make a SATA RAID driver for yourself.

- *Insert the MSI DVD into the DVD-ROM drive.*
 - *Click the "Browse CD" on the Setup screen.*
 - *Copy all the contents in the : \\ChipSet\AMD\Packages\Drivers\SBDrv\SB9xx\RAID\ (and then, please select a folder which was classified according to OS.)*
 - *The driver disk for RAID controller is done.*
4. When prompted, insert the medium disk and press Enter.
For Windows Vista/ Windows 7:
During the Operating system installation, after selecting the location to install Vista/ Windows 7 click on "Load Driver" button to load RAID drive.
 5. You should be shown a list of available RAID controller(s).
 6. Select the compatible RAID controller for 32-bit/ 64-bit version system and then press ENTER.
 7. The next screen should confirm that you have selected the RAID controller. Press ENTER again to continue.
 8. You have successfully installed the RAID driver, and Windows setup should continue.
 9. Leave the medium until the system reboots itself. Windows setup will need to copy the files from the medium again after the RAID volume is formatted, and Windows setup starts copying files.

Installing the RAID Driver Under Windows (for Non-bootable RAID Array)

1. Insert the MSI DVD into the DVD-ROM drive.
2. The DVD will auto-run and the setup screen will appear.
3. Under the Driver tab, click on AMD chipset drivers by your need. The AMD chipset drivers includes RAID Driver.
4. The driver will be automatically installed.

